



t 01903 502892

e [support@southernidsolutions.co.uk](mailto:support@southernidsolutions.co.uk)

w [www.southernidsolutions.co.uk](http://www.southernidsolutions.co.uk)

---

## Selecting the sensor type: See Through or Reflective



The printers default setting is **SEE THROUGH** which is designed for standard labels. If you are using labels, you can skip this section.

- See through is also known as Label Gap or Transparent
- Reflective is also known as Black Mark, Black Reg Mark or Black Line

## To switch between sensor types:

1. Turn ON the printer holding the top 3 buttons **PAUSE**, **FEED** and **STOP**.
2. The printer will power up with the **Power**, **Print Condition** lights **ON**.
3. Press and hold the **MODE** button. While keeping it depressed, press and release the **STOP** button.
4. Depending on sensor type:
  - If the printer is now in **TRASPARENT** mode, the buzzer sounds **ONCE**
  - If the printer is now in **REFLECTIVE** mode, the buzzer sounds **TWICE** and the print **LED** flashes

**NOTE:** For normal labels, the mode would be **SEE THROUGH** by default and therefore the buzzer sounds once. The condition **LED** is lit at all times.

---

Your specialist for labels, printing thermal ribbons, and barcode printing.



Printers



Barcodes



Verification



Labels



Service



Ribbons